

# **GST CHANGES FOR SAMSUNG ECR's**

## FOR ALL CASH REGISTERS

ALL CHANGES ARE DONE IN PROGRAM MODE

WHERE YOU HAVE A CHOICE OF TAX, ONLY CHANGE THE ONE  
PERTAINING TO **GST**

AFTER CHANGE – PUT YOUR MODE BACK TO REGISTER POSITION

ALBERTA CASH REGISTER IS NOT RESPONSIBLE FOR ERRORS MADE DURING  
PROGRAMMING

## **ECR240**

FOR TAX 1 (DO NOT ENTER DECIMAL)

**ENTER:                    {5000} {REC'D ON ACCT}**

FOR TAX 2 (DO NOT ENTER DECIMAL)

**ENTER:                    {5000} {PAID OUT}**

## **ECR290**

FOR TAX 1 (ENTER DECIMAL)

**ENTER:                    {5.00001}        {TAX SHIFT} {CASH}**

FOR TAX 2 (ENTER DECIMAL)

**ENTER:                    {5.00002}        {TAX SHIFT} {CASH}**

FOR TAX 3 (ENTER DECIMAL)

**ENTER:                    {5.00003}        {TAX SHIFT} {CASH}**

FOR TAX 4 (ENTER DECIMAL)

**ENTER:                    {5.00004}        {TAX SHIFT} {CASH}**

## **ECR 265, 380, 380M, 390M**

(ENTER DECIMAL)

ENTER: {5.00000} {TAX SHIFT} {CASH}

CR 265 only has 3 taxes

## ECR 650

P mode – menu appears in screen

ENTER: {2}

For Tax 1: {cash} {cash} {cash} (cursor will be at tax rate)

ENTER: {5.000} {CASH} {CLEAR or ESC} TURN KEY BACK TO REG

For Tax 2: {2} {cash} {cash} {cash} or more until cursor is at tax rate)

ENTER: {5.000} {CASH} {CLEAR or ESC} TURN KEY BACK TO REG

## ECR 4900, 4915, 4940

FOR TAX 1 (DO NOT ENTER DECIMAL)

ENTER: {5.00000} {TAX SHIFT} 1, or 2, or 3, or 4(which one is GST)

## ECR 5100, 5140, 5115, 5115II, 5200, 5212, 5240

## 5200M, 5215M, 5240M

(ENTER DECIMAL)

ENTER: {5.00000} {TAX SHIFT} {CASH}

## ECR 6500, 6540, 6500II, 6540II

FOR TAX 1 (ENTER DECIMAL)

ENTER: {5.000001} {TAX} {CASH}

FOR TAX 2 (ENTER DECIMAL)

ENTER: {5.000002} {TAX} {CASH}

FOR TAX 3 (ENTER DECIMAL)

ENTER: {5.000003} {TAX} {CASH}

**FOR TAX 4 (ENTER DECIMAL)**

**ENTER:                    {5.000004}        {TAX} {CASH}**

**ECR 7000, 7040**

**(ENTER DECIMAL)**

**P mode – Select Taxes**

**Choose tax from menu**

**Cursor to your choice**

**Choose add on from pop up window**

**Enter {5.00}**

**For threshold and high level leave as is**

**Press ESC to go back to main menu**

**SPS 1000**

**(ENTER DECIMAL)**

**P mode – Select #6 Taxes**

**Tax 1 : add on – press {enter} {enter}**

**Enter {5.000} {enter} {esc}**

**Cursor to your choice**

**Choose add on from pop up window**

**Enter {5.00}**

**For threshold and high level leave as is**

**Press ESC to go back to main menu**